





**ToneClone O18RS-L OUTPUT TRANSFORMER**

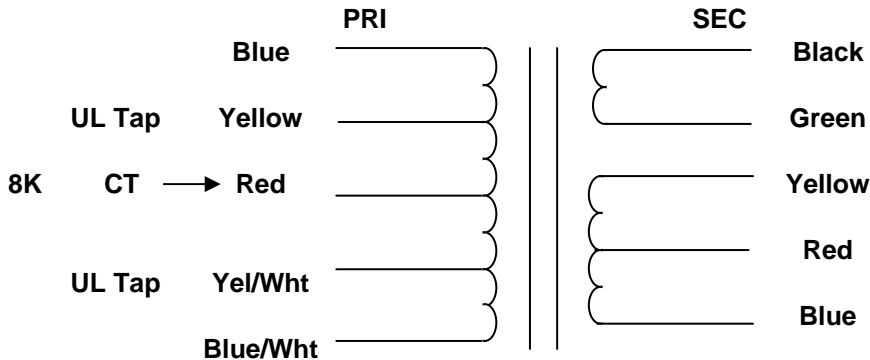

Speaker should be connected to leads marked "L" and other terminals joined as shown, to suit particular speaker impedance.

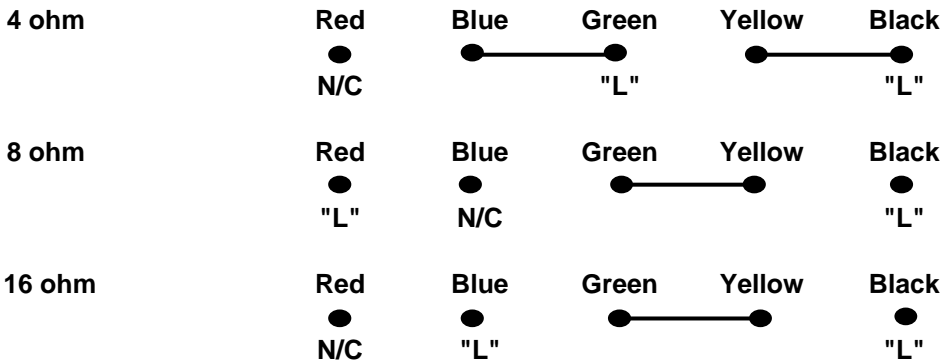

N/C = No Connection

To use a standard impedance selector switch, wire the black as your common. Tie the green and yellow wires together and float them. Your red wire will be your 8 ohm tap and the blue wire will be your 16 ohm tap. There is no 4 ohm option available using this type of wiring.