




**AXIOM MAR-50-PT**

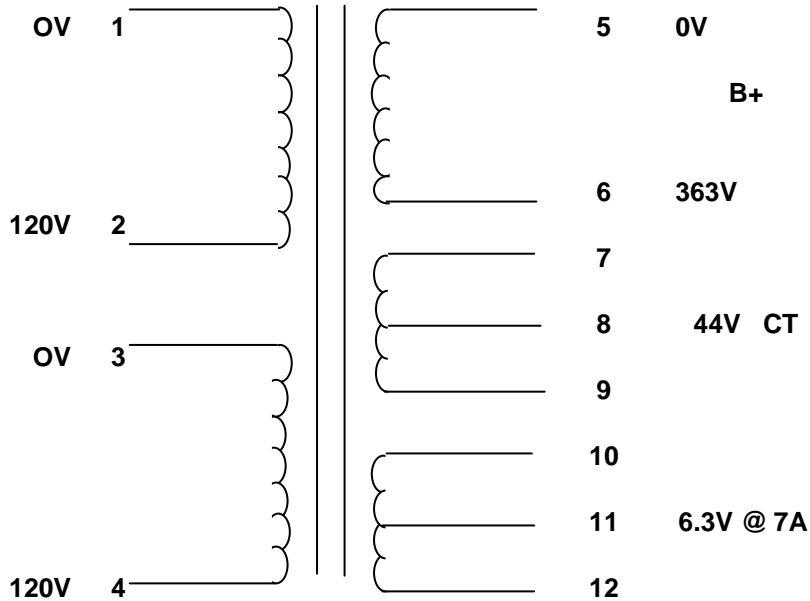

**DUAL PRIMARY**

**On a dual primary PT, BOTH primary windings MUST be used!**

**For 120V usage : Tie #1 & #3 together and tie #2 & #4 together.**

**For 230V/240V usage: Tie #2 & #3 together and float them.  
Use #1 & #4 for your connections.**