




SuperStack

AXIOM M-JCM2000-P Power Transformer

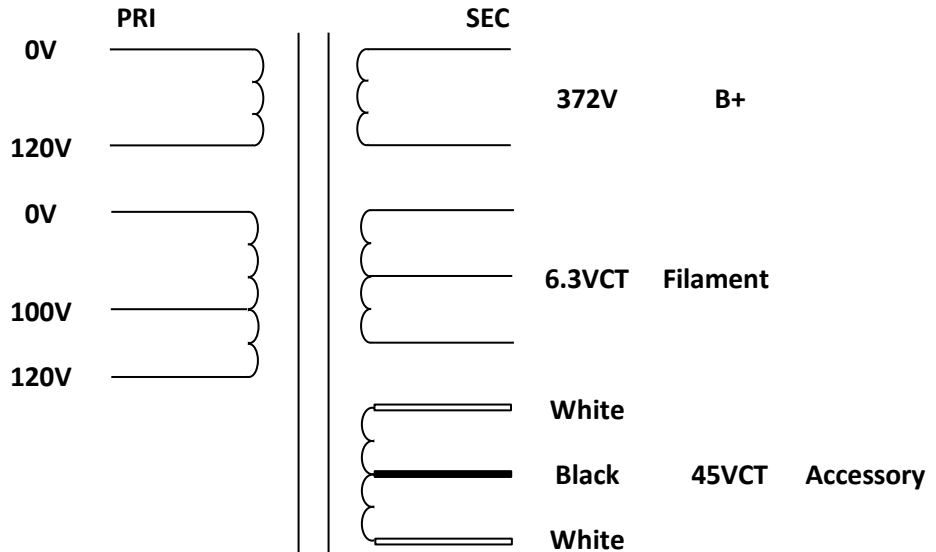

Note: both primary windings must be used. Contact Mercury if you have any questions.

120V Primary Wiring	100V Primary Wiring	220V Primary Wiring	230/240V Primary Wiring
AC IN1: ① + ③ AC IN2: ② + ⑤ FLOAT: ④	AC IN1: ① + ③ AC IN2: ④ TIE & FLOAT: ② + ⑤	AC IN1: ① AC IN2: ④ TIE & FLOAT: ② + ③ FLOAT: ⑤	AC IN1: ① AC IN2: ⑤ TIE & FLOAT: ② + ③ FLOAT: ④