




SuperStack

AXIOM MAR100-P Power Transformer

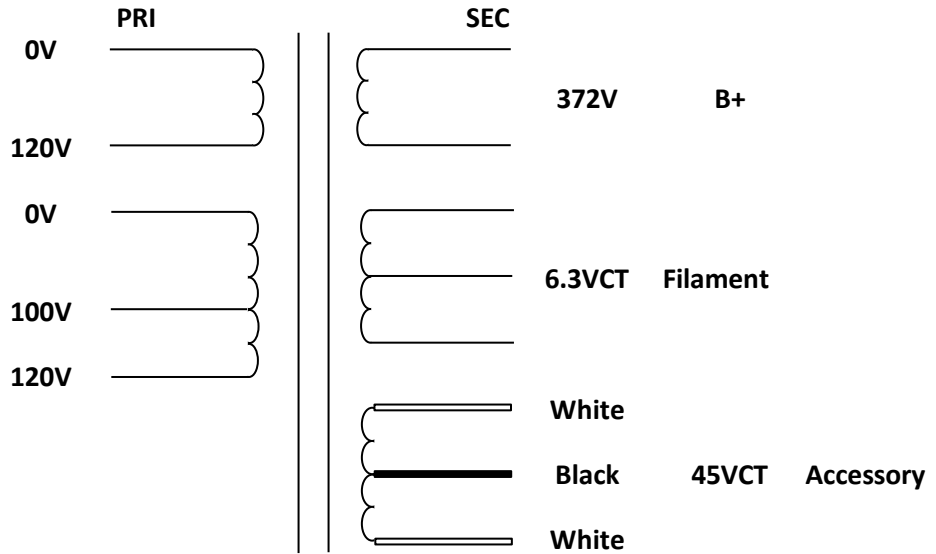

Note: both primary windings must be used. Contact Mercury if you have any questions.

| 120V Primary Wiring                        | 100V Primary Wiring                              | 220V Primary Wiring                                      | 230/240V Primary Wiring                                  |
|--|--|--|--|
|  |  |  |  |
| AC IN1: ① + ③<br>AC IN2: ② + ⑤<br>FLOAT: ④ | AC IN1: ① + ③<br>AC IN2: ④<br>TIE & FLOAT: ② + ⑤ | AC IN1: ①<br>AC IN2: ④<br>TIE & FLOAT: ② + ③<br>FLOAT: ⑤ | AC IN1: ①<br>AC IN2: ⑤<br>TIE & FLOAT: ② + ③<br>FLOAT: ④ |