


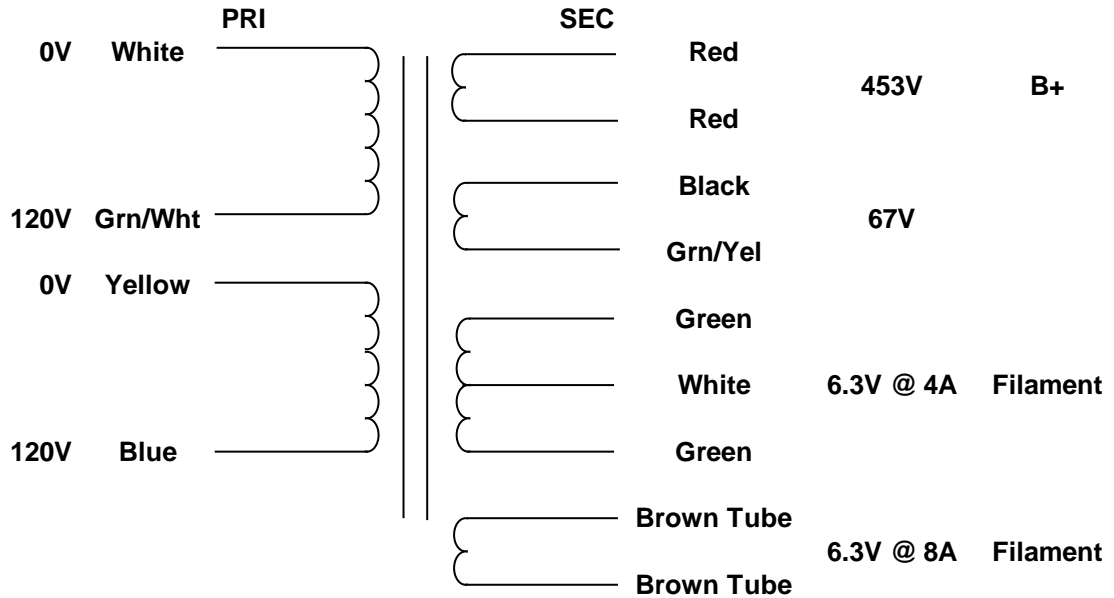

APS MIG-50-P POWER TRANSFORMER



DUAL PRIMARY

On a dual primary PT, BOTH primary windings MUST be used!

For 120V usage : Tie #1 & #3 together and tie #2 & #4 together.

For 240V usage: Tie #2 & #3 together and float them.

Use #1 & #4 for your connections.